

wirata[®]

INSTRUCTION MANUAL

Model No.:

ET-15

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

| MODEL NO. | ET-15 |
|-------------------|--------------|
| Power Consumption | 750W |
| Voltage | 220-240V |
| Frequency | 50Hz |

WHAT'S IN THE BOX

1. Bread Toaster – 1pc
2. Instruction Manual – 1pc

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- 1: Start control
- 2: Stop & Automatically eject button: STOP
- 3: Toasting setting knob
- 4: Bread insert slot
- 5: Crumb tray

GENERAL INSTRUCTIONS

When using the electrical appliance, the following basic safety precautions should always be followed. Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

1. Do not touch hot surfaces. Use Handles or knobs.
2. To protect against electrical shock. Do not immerse cord plug or appliance in water or other liquid. Do not put hand in side of product when working.
3. Close supervision is necessary when appliance is used near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off accessories.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliances to factory for examination repair or adjustment.
6. Do not use outdoors. This appliance is for household use only.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not place on or near gas or electric burner, or in a heated oven.
9. Toasting Lever must be in the "Up" position before attaching or disconnecting the plug from wall outlet.
10. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
11. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies when in operation.

12. Do not attempt to dislodge food when toaster is plugged in.
13. The bread may burn therefore do not use the toaster near or below combustible material, such as curtains.
14. The temperature of accessible surfaces may be high when the appliance is operating.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
16. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

SELECTING THE BROWNING LEVEL

Select the setting of your choice from the possible browning levels. The degree of browning increases in relation to the numbers on the selection dial.

HOW TO USE TOASTER

Place the bread in the toaster and push the lever down until it automatically locks into place.

HOW TO STOP TOASTER

The toaster is automatically released when the previously selected browning levels. If you want to interrupt the toasting process at any time, just push the "STOP" button and the lever button will return to its original position.

CLEANING INSTRUCTION

To clean your toaster, first remove the plug from the mains outlet, then open crumb tray at bottom of toaster. Clean the toaster with a soft, dry cloth and wipe dry afterwards, never use water.

NOTICE

The appliances are not intended to be operated by means of an external timer or separate remote-control system.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.