

wirata®

INSTRUCTION MANUAL

Model No.:

RS-8.5

 
Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	RS-8.5
POWER	10W
VOLTAGE	220-240V
FM RADIO FREQUENCY RANGE	87 – 108 MHz
AM RADIO FREQUENCY RANGE	520 - 1710 KHz
SW RADIO FREQUENCY RANGE	2.3-22.0 MHz

WHAT'S IN THE BOX

1. Portable Radio – 1set
2. Power cord – 1pc

PARTS DESCRIPTION

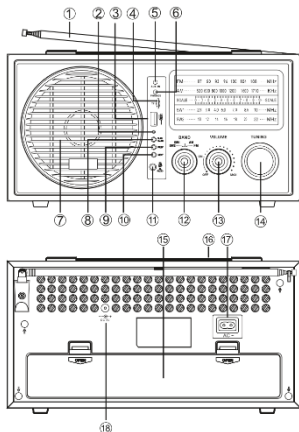

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|-------------------------|--|
| 1: Antenna | 10: Next button |
| 2: Play Indicator | 11: Radio System
USB/BT reading system |
| 3: USB Interface | 12: Band selection switch |
| 4: TF Card interface | 13: Volume Control |
| 5: AUX in jack | 14: Tuning control |
| 6: 3.5mm Headphone jack | 15: Battery compartment |
| 7: Speaker | 16: Handle |
| 8: Play/Pause button | 17: AC Socket |
| 9: Previous button | 18: DC 6V Input |

PRECAUTIONS

- High and low temperature anomalies.
- Direct sunlight.
- Damp, water droplets, oil, chemical solvents, pesticides economy.
- Suddenly moved from a cold place to a warm place, you should not use the unit until it returns to the interior temperature.
- Do not put objects with liquids, such as vases, items on the machine.

HOW TO OPERATE

1. CHARGING:

This unit is built-in with high-capacity lithium polymer battery. For first time usage, charge the unit with equipped charging cable for 7-8 hours. After charged, "turn On/Off" switch to On position to start unit operation.

2. INSTALLING THE BATTERIES:

- a) Open the lid of the battery case.
- b) Insert the batteries with correct polarity.
- c) Close the lid.

3. BATTERY LIFE

Using batteries R20(size D) SUM-1(NS): FM\AM\SW1\SW2:
Approx 20 hours.

 
Please Note: When the sound becomes weak or distorted, replace all the batteries with new ones.
When the unit is not to be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

4. **PLAYING MUSIC**


Insert a U disk or SD card into the "U DISK or SD/MMC Card slot" with audio file. It will automatically content as default priority, Press **Prev/Next** to select to play previous or next audio content.

5. **OPERATING THE RADIO**

a) Turn the unit on by rotating the VOLUME knob clockwise.

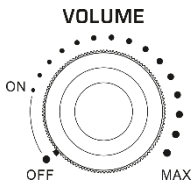


 b) Set BAND to FM, AM, SW1 OR SW2.

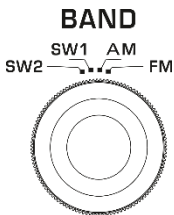


c) Tune in a station using TUNING.

 
- To improve radio reception
- To turn off the radio, set VOLUME to "OFF"

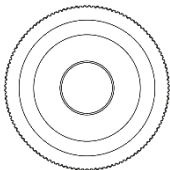

 
FM: Extend the telescopic antenna and adjust the length and angle for the best reception.

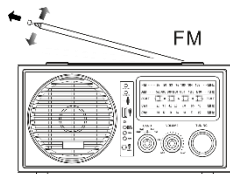

 AM: Since the reception is affected by the direction of the radio, rotate the radio horizontally for optimum reception.

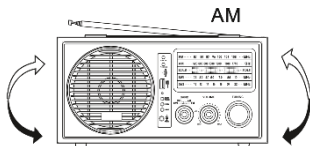

 SW: Extend the telescopic antenna and adjust the length for the best reception.

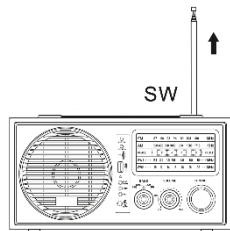

SPECIFICATION

a) **Frequency Range:**

FM: 87-108 MHz AM: 520-1710 KHz
SW: 2.3-10.0 MHz SW2: 10.0-22.0 MHz

b) **General specification:** Voltage: AC 220-240V ~ 50Hz
10WDC: 6V Batteries (UM-1)1.5X4

c) **Output power:** 10W

 
d) **Speaker:** 5 Inch

6. BLUETOOTH FUNCTION

Bluetooth connection: Press USB/BT button, switching to Bluetooth mode and hear a "Bluetooth" sound. Switching on Bluetooth in compatible device then connecting the Bluetooth by searching the product name: RS-8.5. If connector fail, turn ON/Off the unit, and repeat the above steps.

7. POWER SOURCES

AC Power: You can power your portable system by plugging the detachable AC power cord into the AC inlet on the back of the unit and into a wall AC power outlet. Check that the rated voltage of your unit matches your local voltage. Make sure that the AC power cord is fully inserted into the unit.

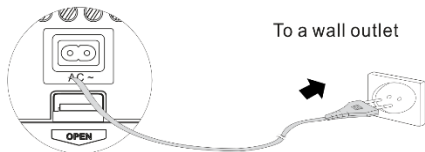

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

 


The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

8. DC POWER

Open the battery cover, insert 1.5V X 4 "D" size batteries into the battery compartment, ensure the batteries are inserted in designated order to avoid any damage cause to the unit. Always remove the batteries when the unit is not used for a long period of time, as this may cause leakage to the batteries and subsequently damage the unit.

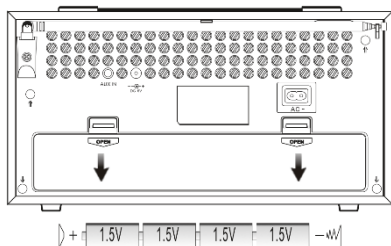

Please Note:

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.