

wirata[®]

INSTRUCTION MANUAL

Model No.:

SF-180


Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	SF-180
POWER	60W
VOLTAGE	220-240V
FAN SIZE	18" (450mm)
FREQUENCY	50Hz
NO. OF BLADE	5
FAN SPEED	3

WHAT'S IN THE BOX

1. Stand Fan – 1set
2. Instruction Manual– 1 set

PARTS DESCRIPTION

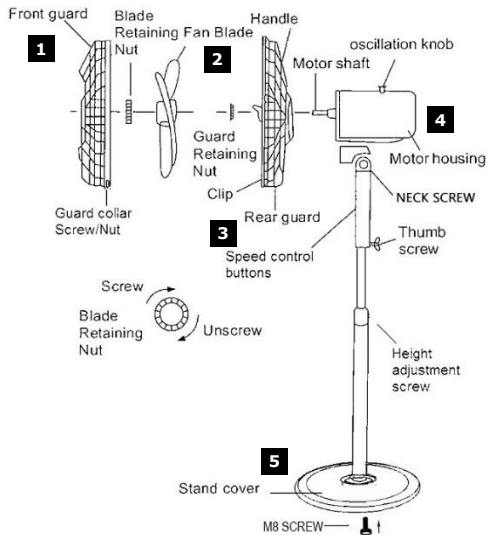

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|----------------|------------------|
| 1: Front guard | 4: Motor housing |
| 2: Fan blade | 5: Stand cover |
| 3: Rear guard | |

GENERAL INSTRUCTION

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of fire, electric shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
3. The appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible by their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Do not leave the fan running unattended.
6. Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
7. If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.

8. Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
9. This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
10. Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
11. Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
12. Avoid contact with moving parts. Do not insert any body parts (e.g., finger) or objects through the grill when the fan is operating.
13. Do not cover the grille, or operate in close proximity to curtains, etc.
14. This product is intended for normal domestic/household use only.
15. Always disconnect the fan when moving it from one location to another.
16. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
17. Be sure fan is on a stable surface when operating to avoid overturning.
18. Do not immerse in water.
19. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person, in order to avoid a hazard.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.

*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



ASSEMBLY INSTRUCTION

1. Loosen the screw from the bottom of lower pipe.
2. Place lower pipe with pipe support on stand cover and fix with the screw.
3. Attach the motor with switch compartment onto the upper pipe. Ensure the switch compartment is pushed fully onto the upper pipe and secured with the screw provided.
4. Loosen guard mounting nut from the motor housing.
5. Position rear guard firmly to motor housing and then fasten by turning guard mounting nut clockwise tightly. Do not overtighten it.
6. Push the blade along motor shaft. Fasten it firmly with spinner by turning counter clockwise.
7. Hang the front guard to rear guard with the position fixer provided at the rim of guard, and then fix together with clips provided.

HOW TO OPERATE

1. Push the oscillation knob to oscillate. Pull the oscillation knob to stop.
2. Plug the fan into a mains socket, select the desired speed setting. There are 4 settings-0(Off), 1(Low), 2(Medium) and 3(High).
3. To adjust the tilt angle of fan head, loosen the neck screw, swivel the fan to desired angle and then re-tighten the screw.

**ENVIRONMENT PROTECTION**

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.