

# wirata®

## INSTRUCTION MANUAL

Model No.:

**LT-D5.5U**


Please read *Instruction Manual* before use  
& Follow ALL the instructions carefully.

<b>Model No.</b>	<b>LT-D5.5U</b>
Power Consumption	5W
Power Supply	AC220V-240V DC 3V (Battery UM-1x2)
FM Radio Frequency Range	88 – 108 MHz
MW Radio Frequency Range	530 - 1600 KHz
SW Radio Frequency Range	3.5-23 MHz

## WHAT'S IN THE BOX

1. Radio – 1set
2. Power cord – 1pc
3. Instructional Manual – 1pc

## PARTS DESCRIPTION

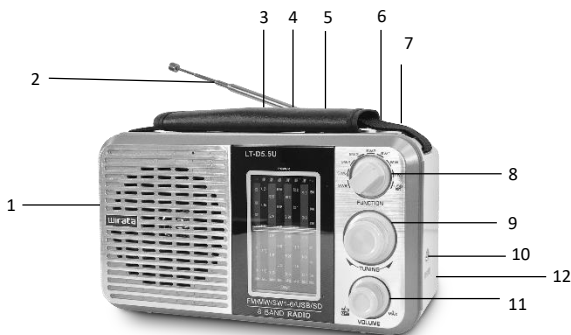

### MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- |                        |                        |
|------------------------|------------------------|
| 1: Speaker             | 7: Track Up            |
| 2: Telescopic antenna  | 8: Band Selector       |
| 3: SD Card             | 9: Tuning switch       |
| 4: USB Port            | 10: Earphone Jack      |
| 5: Track Down          | 11: Volume Control     |
| 6: Play/Pause Function | 12: AC Power In (Back) |

## PRECAUTIONS

- In order to avoid fire or electric shock, do not expose the machine to rain or moisture.
- Before using AC power to power the machine, please check whether the grid voltage is the same as the voltage specified in this manual.
- Pay attention to the (+/-) polarity direction of the dry battery, and insert the battery correctly according to the instructions.
- When the product is not used for a long time, it is recommended to remove the dry battery to avoid damage to the product due to battery leakage.

## SAFETY INSTRUCTIONS

**S**

- a) **Cannot be used in the following places:**
- Next to the gas stove.
  - Places with flammable gas
  - Places splashed with rain and water may cause discoloration, deformation, fire, and electric shock.
- b) Do not place it in a car or a place exposed to direct sunlight. Abnormal high or low temperature will cause adverse effects and cause fire and electric shock.
- c) Do not use it in an unstable place. Falling may cause malfunction.
- d) Do not knock on the body to avoid malfunction.
- e) Please do not use dry batteries other than those specified, or different types, mixed use of new and old dry batteries.
- f) If the dry battery is ruptured and leaking, it cannot be used, which may cause damage or malfunction to the product.
- g) Cannot charge dry batteries.
- h) When thundering, please do not touch the whip antenna and power plug to avoid the risk of electric shock.
- i) Please insert the power plug correctly into the socket.
- j) When unplugging the power cord, please hold the plug part with your hand and pull it out. Do not pull the power cord.

- k) When not in use, be sure to unplug the power plug.
- l) When you find an abnormality (smelly, smoke, etc.), please unplug the power plug quickly and stop using it.
- m) Please clean the dust on the power plug regularly. Dust adhering to the power plug may cause short circuit, malfunction, etc.
- n) Do not touch or unplug the power plug with wet hands, as this may cause the risk of electric shock. Do not get into water, it will cause short circuit or electric shock.
- o) It is forbidden to repair by non-professional repair technicians. For maintenance matters, please contact local dealers.
- p) It is not advisable to use the loud volume state for a long time to listen, so as not to damage the hearing of the ears.
- q) When transporting, please handle with care. Please remove the USB memory and SD card during transportation to avoid damage to the USB memory and SD card.
- r) Do not put foreign objects such as pins, iron wires and other metal objects in the crevices of the fuselage.
- s) For safety during maintenance, please unplug the power plug. Please use a soft cloth soaked in clean water or soapy water and wring dry before wiping.
- t) Do not use alcohol or thinner to clean the cabinet, which may cause discoloration, deformation, electric shock and other malfunctions.
- u) Do not place the power cord where infants and children can reach it. In order to avoid accidents caused by wires entangled around the neck.

## HOW TO OPERATE

### 1. AC POWER CONNECTION

- a) Check the setting of the AC voltage selector located on the rear panel before plugging the unit into an AC socket. If necessary, adjust the selector to correspond to the AC power voltage used in your area.

### 2. DC POWER CONNECTION

- a) Disconnect the AC power lead, and remove the battery compartment cover. Connection of the AC or DC power lead to the unit disconnects the batteries.
- b) Insert 2 "D" size batteries (UM/SUM-1,R20,HP-2 or similar) into the battery. When inserting or removing the batteries (1) and (2), push them towards the (-) battery terminals. Installing the batteries incorrectly may cause the unit to malfunction.


\*Batteries are not included.

### **NOTES:**

- a) If the unit will not be used for a long period of time, remove the AC power lead from the AC socket.
- b) Connection of the AC power lead to the unit disconnects the batteries.
- c) Never use a power lead other than the one supplied.
- d) Use of a power lead other than the one supplied may cause an electric shock or fire.
- e) If a humming noise occurs, turn the power plug upside down where it is connected to the AC power input socket on the unit.

### 3. LISTENING TO THE RADIO:

- a) Please notice AC electricity inside unit after connecting to power supply.
- b) Tuning:
  - i. Set the FUNCTION switch to FM, MW, SW1/SW2..SW6.
  - ii. Adjust the TUNING dial to the desired frequency.
  - iii. Lift and rotate the FM antenna, to improve the FM reception.
  - iv. Adjust the volume level by rotate "VOLUME" control.

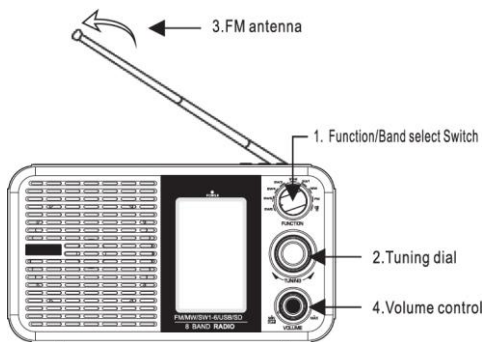
 


**Note:** Please do not pull out the USB/SD/TF card to play, otherwise it will cause damage and cannot play normally.

#### 4. LISTENING TO USB MASS STORAGE DEVICE/ SD CARD:

- a) **NOTE:** This product is not compatible with MTP and AAC file system from USB mass storage device or MP3/WMA player.

#### 5. TO PLAYBACK USB/SD CARD:

- a) Press the FUNCTION switch repeatedly on main unit to select USB or SD function.
- b) Connect the USB memory or SD card device which with MP3 format files at the USB/SD slot on the unit.
- c) When the USB memory or SD card is connected to the main unit, playback will start from first track of first supported folder.
- d) Select desired file to be played back by pressing the  or  button. Playback will start at desired.


#### **NOTE:**

To pause playback:

Press the  button.

To remove USB memory/SD card device.

- Turning the FUNCTION switch to change to other function.
- Disconnect USB memory/SD device from the USB/SD terminal.

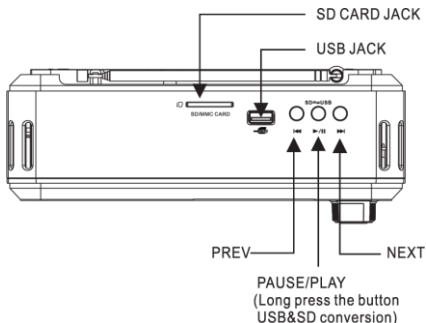

### **NOTES:**

- The difference data format may cause data loss from USB memory device while connecting to the audio system.
- Files compressed in MP3 format only can be played back when connected to the USB or SD card terminal.
- This USB memory's or SD card format supports FAT 16 or FAT 32.
- Cannot guarantee that all USB memory devices will work on this audio system.
- USB cable is not recommended for use in this audio system to connect to USB memory device. Use of the USB cable will affect the performance of this audio system.
- The USB terminal in this unit is not intended for a PC connection but is used for music streaming with a USB memory device.
- External HDD-storage cannot be played back via USB terminal.
- If the data inside the USB memory or SD card is large, it may take longer time for the data to be read.

### **TROUBLESHOOTING GUIDE**

- a) When you are not using this machine, please turn off the power of this machine.
- b) When playing, there will be noise/broken sound/lower sound/distorted sound due to the following reasons:
  - i. The voltage may be too low. Charge the battery or replace the battery in time.
  - ii. External signal interference, stop working.
- c) There is no sound for the following reasons:
  - i. The power is not turned on or the switch is not turned on.
  - ii. The speaker may be broken, please replace the speaker.
- d) If the machine is not used for a long time, the battery should be taken out to prevent the battery fluid from leaking out and damaging the machine.



#### **ENVIRONMENT PROTECTION**

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.