

wirata®

INSTRUCTION MANUAL

Model No.:

HC-908


Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	HC-908
CURRENT	0.2A
VOLTAGE	DC 5V
FREQUENCY	50/60Hz
BATTERIES	1x Li-ion 3.7V DC 2000mAh
INPUT	100-240V, 50/60Hz, 0.2A
OUTPUT	5V DC/1000mA

WHAT'S IN THE BOX

1. Hair Clipper – 1set
2. Oil, Cleaning brush, hair comb & scissors– 1 set
3. Charging cable – 1pc
4. Attachment Comb – 4pcs (3, 6, 9, 12mm)

PARTS DESCRIPTION

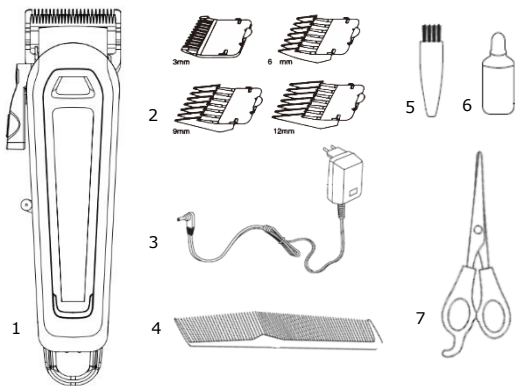

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|----------------------|-------------------|
| 1: Hair Clipper | 5: Cleaning brush |
| 2: Comb (3,6,9,12mm) | 6: Oil |
| 3: Charging cable | 7: Scissors |
| 4: Hair comb | |

GENERAL INSTRUCTION

The hair clipper with **four** easily replaceable comb attachments provides possibility of obtaining different lengths of cutting and clipping hairline.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

Herewith information concerns your health and safety. It is obligatory to learn about all instructions for use and safety information before first usage of the clipper.

1. Before using the appliance for the first time, you must read and understand the operation manual completely.
2. Consider the operation manual as part of the product and store it in a safe and accessible place.
3. Include this operation manual if passing the appliance on to a third party.
4. In the case of conflicts with national safety specifications or instructions, the national
5. requirements must be followed.

WARNING:

1. Do not use during bath.
2. Never immerse the device and cord in water or other liquids.
3. Do not place the hair clipper on wet surface or cloth during operation.
4. Do not place or store the device in the area where it can fall into water.
5. Do not use the device with damaged comb attachment. It can cause injuries hazard.

6. Never try to remove the foreign bodies out of the clipper using sharp objects (i.e. comb).
7. Always clean after using.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Do not apply not recommended attachments.
11. The hair clipper can be used both as a mains and cordless device.
12. The cut hair should be clean, dry and combed.
13. Put the towel around the neck to avoid getting the cut hair under the collar.
14. Use the hair clipper only as intended according to the herewith instructions.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.


*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



FUNCTION INSTRUCTION


1. BLADE ALIGNMENT

- a) Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.

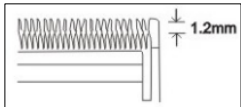

- b) Blades must be realigned if they have been removed for cleaning or replacement.

- c) To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 1.2mm back from bottom blade. Compare your clipper blades with the sketch.)

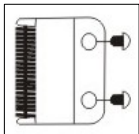

2. OIL

- a) To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- b) Do not use hair oil, grease, oil mixed with kerosene or any solvent.
- c) As the solvent will evaporate and leave the thick oil which may slow down the blades motion.




3. BLADE LEVER

- a) The lever is conveniently located near your thumb (if you're right-handed) so it can easily be adjusted while the clipper is in your hand.
- b) The Lever adds versatility to the Clipper by allowing a gradual change to the closeness of a cut without an attachment comb.
- c) When the Lever is in the uppermost position, the Blades will give the closest cut leaving the hair very

short. Pushing the Lever gradually downward increases the cutting length.

- d) In its lowest position, the Lever will leave the hair approximately the same length as a #1 comb.
- e) The Lever will also extend the use of the blades since a different cutting edge is used in each setting.
- f) In addition, if extremely heavy hair cutting has jammed the blades, it will help to remove hair that has become wedged between the two blades without removing the blades.
- g) While the Clipper is running, move the Lever from "close cut" to "longer cut" a couple of times. Doing this each time after use will help to keep the blades clear of cut hair. If the Clipper stops cutting and this does not help, the Cutting Blades are blunt. Replace them with new blades.

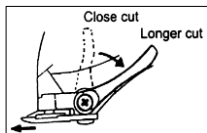

CLEANING: Never clean the appliance under running water! Use the included brush to remove hair. Wipe the enclosure with a dry, soft cloth. Do not use abrasive cleaning agents.

HOW TO OPERATE

OPERATION OF HAIR CLIPPER

The hair clipper can be used both as a main supplied or cordless device.

1. OPERATION WITH POWER SUPPLY ADAPTOR

At first insert the adaptor plug into the device and then insert the adapter plug into the mains supply outlet (100-240 V). In mains supplied mode the device is ready for use.

2. LOADING ACCUMULATORS AND CORDLESS OPERATION:

- a) In order to load the device, move the ON/OFF switch to "OFF" position.
- b) Connect the unit to the adapter cord.
- c) Insert the plug of the adapter into appropriate mains supply outlet (100-240 V).
 - The LED indicator will change from red to green when full charged. When fully loaded the hair clipper can operate approximately 3.5 hours.
- d) The hair clipper accumulator obtains optimum power after three cycles of loading and unloading. 2.5-3 hours is enough for next loading. In order to provide long life of accumulators, they should be completely unloaded before loading.

INSTRUCTION FOR HAIR CUTTING

1. BEFORE STARTING THE HAIR CUT:

- a) Inspect the clipper, making sure that it is free of oil between the cutting blade teeth and turn the unit on to distribute the oil and to make sure it is running smoothly. Wipe off any excess oil. This should be done after each use. While using the unit, untwist the cord from time to time to avoid tangling.
- b) Seat the person so their head is approximately at your

eye level. This allows ease of visibility while cutting and a relaxed control of the unit.

- c) Before cutting always first comb the hair so it is tangle free and as it is naturally worn.
- d) Place a towel around the neck and shoulders of the person having the haircut.

REMINDERS:

Make sure that the appliance is fully charged when you start to cut. Only use appliance on clean, dry hair. Do not use it on freshly washed hair.

- a) Cut the hair in a relaxed and slow manner. Use short strokes only to work gradually over the entire head.
- b) Always take off a little hair at a time; you can always trim off additional hair later.
- c) As you work, comb the hair frequently back into the style to which you are cutting.
- d) When cutting with this Clipper it is better to leave the hair dry, not wet. With the hair dry, it is much easier to control the amount of hair being cut.

2. BEGINNING THE HAIRCUT:

- a) Cutting hair requires practice so It is always better to leave the hair longer for the first few haircuts until you become used to the length to which each comb attachment cuts the hair.

3. ATTACHMENT COMB:


- Attachment Comb #1 leaves 3mm (1/8 inch) hair length.
- Attachment Comb #2 leaves 6mm (1/4 inch) hair length.
- Attachment Comb #3 leaves 9mm (3/8 inch) hair length.
- Attachment Comb #4 leaves 12mm (1/2 inch) hair length.

Each comb attachment is marked accordingly on its outside middle surface.

- To attach a comb, hold it with its teeth upward and slide it onto and along the clipper blade until the front of the comb firmly seats against the clipper blade.
- To remove the comb, simply pull the comb upward and away from the clipper blade.
- For even cutting, allow the comb attachment/cutter through quickly. Also remember to comb the hair frequently to remove trimmed hair and to check for uneven strands.


4. **STEP 1 – NAPE OF THE NECK:**

- a) Attach comb attachment 3mm or 6mm.
- b) Hold the Clipper cutting edge pointed up and begin the haircut, starting at the center of the head at the base of the neck (see diagram 1).
- c) Hold the clipper comfortably in your hand and hold lightly against the head with the comb teeth pointing upward. Gradually and slowly lift the clipper working upwards and outwards, through the hair, trimming just a little at a time.
- d) As you cut, gradually lift the Clipper head towards you. Continue to cut the back area from the bottom of the neck upwards to the top of the ears.

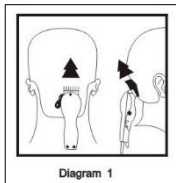


5. **STEP 2 – BACK OF THE HEAD:**

- a) Change to the next longest comb attachment 9mm or 12mm and cut the back of the head (see diagram 2).

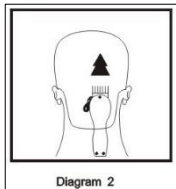


6. STEP 3 – SIDE OF THE HEAD:

Change to one of the shorter combs 3mm or 6mm, trim sideburns, i.e. the hair directly in front of the ears. Change to one of the longer combs, 9mm or 12mm, and continue to cut to the top of the head (see diagram 3).

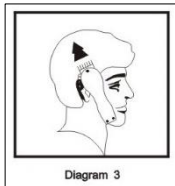


7. STEP 4 – TOP OF THE HEAD:

a) Using the comb attachment 9mm or 12mm, cut top of head from back to front against the direction in which the hair normally grows (see diagram 4). In some cases, this may require the reverse, or cutting from front to back.

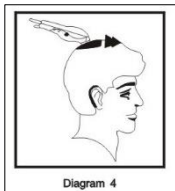


b) Comb attachments 3mm or 6mm are used to achieve a close crew cut or short cut.

c) For longer hair on top, use the comb provided and lift hair on the top of the head. Cut over the comb, with the hair lifted or hold the hair between the fingers to lift it and cut it to desired length (see diagrams 5 and 6).

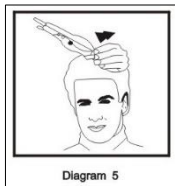

d) Always work from the back of the head.

Hair can be cut shorter gradually by reducing the space between the comb/fingers, and the head. Comb out trimmed hair and check for uneven strands.

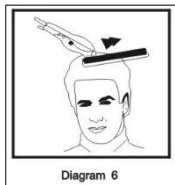

8. STEP 5 – THE FINISHING TOUCH:

- a) Finally, use the Taper Lever without an attachment comb for close trimming around the base of the neck, the sides of the neck and the ears.
- b) To produce a clean straight line at the sideburns, reverse the Clipper by turning the reverse side uppermost (see diagram 7).
- c) Press the Clipper at right angles to the head, tips of the blades lightly touching the skin and work downwards. This way will obtain, as a clean cut as would be given by a razor.

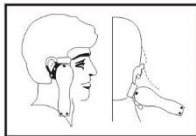


Diagram 7

9. SHORT TAPERED STYLES, 'FLAT TOPS' & SHORT CUTS:

- a) Starting with the longest attachment comb (12mm), cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair, as shown (see diagram 8).
- b) Use the same procedure from the lower side to the upper side of the head, as illustrated. Cut the hair against the direction in which it grows from the front to the crown and then level the cut with the sides.
- c) To give a 'flat top' look, the hair on top of the head must be cut over the top of a flat comb instead of using the attachment comb.
- d) Use closer cutting attachment combs to taper the hair down to the neckline as desired. Comb hair and check for uneven areas and outlining sideboards and neckline as described previously.



Diagram 8

ECOLOGY – ENVIRONMENT PROTECTION

Each user can contribute to protect the environment. It is neither difficult nor expensive. In order to do so:

- a) Return cardboard packages to recycling points.
- b) Throw polyethylene (PE) bags into appropriate containers.
- c) Batteries contain substances harmful to the natural environment. Do not throw them away with other household waste.
- d) Return used batteries to recycling points. Before disposing of or returning the appliance to a recycling point make sure to remove the batteries from the battery compartment.
- e) Return a worn-out appliance to an appropriate collecting point as the components of the appliance may pose a threat to the environment.



ENVIRONMENT PROTECTION

The manufacturer/ importer does not accept any liability for any damages resulting from unintended use or improper handling.

SPECIFICATIONS

Unit: HC-908

Built-in rechargeable: 1x Li-ion 3.7V DC 2000mAh
batteries

Input: 00-00V, 50/60Hz, 0.2A

Output: 5V DC/0000mA



The product technical parameters are included at the name plate. The device is built in II class isolation, it does not require grounding. This hair clippers meet the requirements of effective standards. The device meets the requirements of the following directives:

- Low Voltage Device (LVD) – 2006/95/EC.
- Electro- Magnetic Compatibility (EMC) – 2004/108/EC.
- The product is marked with CE symbol on the name plate.