

wirata[®]

INSTRUCTION MANUAL

Model No.:

HD-668, HD-668A

Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	HD-668	HD-668A
POWER	2000W	2000W
VOLTAGE	220-240V	220-240V
FREQUENCY	50/60Hz	50/60Hz

WHAT'S IN THE BOX

1. Hair Dryer – 1set

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|----------------------------|-----------------------|
| 1: Adjustable concentrator | 4: Temperature button |
| 2: Cool shot button | 5: Hanging loop |
| 3: Speed button | 6: Air inlet |

GENERAL INSTRUCTION

This product is designed and manufactured with high standards. It has the excellent characteristics of well-structure, smooth lines, fashion style, convenience, safety and dependence.

Please read this instruction carefully. Please put it in a suitable place. If you want to transfer it to others, please give them the instruction together.

SAFETY INSTRUCTIONS

This appliance only uses 220-240V.

The instructions for portable electrical appliance shall include the substance of the followings:

When the electrical appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the electrical appliance is switched off, for additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

The electrical appliance is not intended for used by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.

*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



HOW TO OPERATE

1. Press the switch up to I (soft wind), press the temperature button, the temperature will be higher and higher. Press the button of cool wind, then it is switched to (cool wind).
2. Press the switch down to II (strong wind), press temperature button, the temperature will be higher and higher. Press the button of cold wind, then it is switched to (cool wind).
3. Press the switch to 0 (off).
4. This product has an overload protecting set (if the air inlet or outlet opening is obstructed), which can automatically cut off the power. When you meet such situation, you'd better press the switch to 0, after a few minutes you can open and use it again.
5. There is a wind-gathering mouth for you to gather the wind to speed up drying and finalizing the design.

REPARATION CARD

Our factory is responsible for any unqualified products or parts, but if the damage which caused by incorrect operation, our factory will not take any responsibility; if the product needs reparation, send it to the local dealers with the related notes.