

wirata®

INSTRUCTION MANUAL

Model No.:

JK-193

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

MODEL NO.	JK-193
Power Consumption	1850-2200W
Voltage	220-240V
Frequency	50Hz
Volume Capacity	1.7L

WHAT'S IN THE BOX

1. Jug Kettle – 1pc
2. Power cord – 1pc
3. Instruction Manual – 1pc

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|-----------------|--------------------------|
| 1: Spout/Pourer | 4: On/off switch |
| 2: Top lid | 5: Water level indicator |
| 3: Handle | 6: Power base |

GENERAL INSTRUCTIONS

When using the electrical appliance, the following basic safety precautions should always be followed. Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this “**Instructions for use**” for future reference.

SAFETY INSTRUCTIONS

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

HOW TO OPERATE

1. Open the lid, fill with the desired amount of water to the water kettle. Always fill the kettle between the minimum and maximum marks inside the kettle. Too little water will result in the kettle switching off before the water has boiled.
NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.
2. Connect the plug into a power outlet. Press the switch downwards on the handle. The indicator will light up. Then start to boil the water. The kettle will switch off automatically once the water has boiled. You can shut off the power by pressing the switch button upwards at any moment during boiling water.
NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained.
3. Take the plug out of the outlet. Lift the kettle then pour the water.
NOTE: Operate carefully when pouring the water from your kettle as boiling water will scald.

- The kettle will not re-boil until the switch is pressed downwards. Allow to cool for 30~40 seconds before reopening to boil water.
NOTE: Ensure power supply is turned off when kettle is not in use.
- Should you accidentally allow the kettle to operate without water; the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

CLEANING INSTRUCTION

- Always let the kettle cool down first and disconnect the appliance from the power outlet before cleaning.
- Never immerse the kettle area or cord in water, or allow moisture to contact with these parts.

Cleaning Appearance of Housing

Wipe the appearance of body with a wild and damp cloth or cleaner, never use a poisonous cleaner.

Descaling

- Descale regularly, preferably at least once a month and more frequently if your water is very hard.
- To descale your kettle, use:

i. White vinegar

- Fill the kettle with half a litre of vinegar
- Leave to stand for 1 hour without heating

ii. Citric acid:

- Boil half a litre of water
- Add 25g of citric acid and leave to stand for 15 minutes.

iii. A specific descaling agent for plastic or stainless-steel kettles:

- Follow the manufacturer's instructions. Empty your kettle and rinse it 5 or 6 times.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.