

wirata®

INSTRUCTION MANUAL

Model No.:

JK-211S

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

| MODEL NO. | JK-211S |
|-------------------|----------------|
| Power Consumption | 1500W |
| Voltage | 220-240V |
| Frequency | 50-60Hz |
| Volume Capacity | 1.8L |

WHAT'S IN THE BOX

1. Jug Kettle – 1pc
2. Power cord – 1pc
3. Instruction Manual – 1pc

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|------------------|---------------|
| 1: Spout/Pourer | 4: Handle |
| 2: Lid | 5: Power base |
| 3: On/off switch | |

GENERAL INSTRUCTIONS

When using the electrical appliance, the following basic safety precautions should always be followed. Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

1. Keep appliance away from children. Electrical appliances should never be used without adult supervision.
2. Always check whether the voltage indicated on the appliance (underside of kettle and base unit) corresponds with the main voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. Switch off and unplug from outlet when not in use and before filling, emptying and cleaning the kettle.
4. If kettle is overfilled, boiling water may spill out. Fill with cold water only.
5. Do not operate or place any part of this appliance on or near hot surfaces (such as gas or electric burner or in a heated oven).
6. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
7. Never pull the cord as this may damage the cord and eventually cause a risk of electric shock.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard.
9. Avoid touching the surface of the hot kettle, use the handle and knobs.
10. To avoid possible steam damage, do not face the spout when operating the kettle.

11. If the kettle is operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
12. To avoid scalding always ensure the lid is correctly positioned before operation.
13. Scalding may occur if the lid is removed while heating.
14. Carefully open the lid when it is hot.
15. Extreme caution must be practised when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
16. Do not switch your kettle on if it is empty.
17. To protect from electrical hazard, do not immerse the kettle, its power base or cord in any liquid.
18. The kettle is only to be used with the stand provided.
19. To protect against fire, do not operate in the presence of explosive and/or flammable fumes.
20. The appliance must not be immersed in water.
21. The product is not designed for any other uses other than those specified in this booklet.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. This appliance is intended to be used in household and similar applications such as:
 - kitchens, shops, offices and other working environment;
 - farm houses;
 - hotels, motels and other residential type environment;
 - bed and breakfast type environment.

PRECAUTIONS

1. Use only cold water to fill the kettle.
2. The water level must be between the MAX. and MIN. marks.
3. Switch the kettle off before removing from its base.
4. Always ensure that the lid is tightly closed.
5. The base and exterior of the kettle must not become wet.
6. If the kettle is overfilled, boiling water may be ejected.
7. Save these instructions for future reference.

HOW TO OPERATE

1. **Initial Use:** It is recommended that you discard the water boiled in the kettle for the first couple of times to remove any dust and material that is left behind from the manufacturing process.
2. **How to Operate:**
 - a) Open the lid by pressing "Trigger to Open" switch and fill with water to the levels indicated. Replace the lid. Caution: Water must be filled between the MAX and MIN level as indicated on the kettle. Too little water will damage the heating element and too much water will cause boiling water to escape during the boiling process.
 - b) Place the kettle on the Power base and connect to your electrical supply. Position the kettle so that the spout of the kettle is faced away from you.
 - c) Press down the On/Off switch and the indicator lamp will light up to indicate the water is being boiled.
 - d) Never remove the lid while water is boiling.
 - e) Once water has been boiled, the kettle and the indicator lamp will automatically switch off.
 - f) The boiling process can be terminated at any time by lifting the kettle off the power base.

CAUTION:

- a) Never operate the appliance without filling it with water. In the event of this, the power will be cut off automatically.
- b) The filter must be in place during operation otherwise water may spill.

CLEANING INSTRUCTION

1. Remove the plug from the electrical outlet and allow the appliance to completely cool down before cleaning.
2. Never immerse the power cord, kettle and power base in water or any other liquid. In order to maintain the polish of the outer surface, never use abrasive cleaners to wipe the kettle.
3. Descale the kettle regularly. Descaling depends on the frequency of use.
4. To clean the filter, detach by pulling it out. To re-attach, insert filter into the spout.
5. For easy storage, the power cord can be wound around the bottom of the power base.
6. Never attempt to dismantle the kettle or the power base. For any problems, please contact an authorised service facility.

GUARANTEE**Guarantee will be void if:**

- Instructions given are not observed.
- The appliance has been mishandled, misused and damaged by user and not the manufacturer.
- An electricity fault causes damage to the appliance.
- The appliance has been subjected to unauthorised repairs or treatment.

**ENVIRONMENT PROTECTION**

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.