

wirata[®]

INSTRUCTION MANUAL

Model No.:

JK-255

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

MODEL NO.	JK-255
Power Consumption	1850-2200W
Voltage	220-240V
Frequency	50/60Hz
Volume Capacity	1.7L

WHAT'S IN THE BOX

1. Glass Kettle – 1pc
2. Power cord – 1pc
3. Instruction Manual – 1pc

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|--|--------------------------|
| 1: Spout/Pourer | 4: Water level indicator |
| 2: Top lid | 5: Handle |
| 3: On/off switch &
Temperature controller | |

GENERAL INSTRUCTIONS

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

1. Close supervision is necessary when any appliance is used by or near children.
2. Before connecting the kettle, check whether the voltage indicated on the appliance (underside of kettle and base unit) corresponds with the mains voltage in your home. If this is not the case, contact your dealer and not use the kettle.
3. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
4. Do not overfill as boiling water may be ejected, the maximum level indicator. Fill with cold water only.
5. To avoid against fire, do not operated in the presence of explosive and/or flammable fumes. Such as do not operate or place any party of this appliance on or near gas and electric burner or in a heated oven.
6. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
7. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
8. If the cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any way, return the appliance completely to your nearest authorized service agent for examination, repair or adjustment.
9. Avoid touching the surface of the hot kettle, use the handle and knobs.
10. To avoid possible steam damage, not face the spout

when operating the kettle.

11. If operated on wood furniture, use a protective pad to prevent damage to delicate finishes. To avoid scalding, always ensure the lid is correctly positioned before operation. Scalding may occur if the lid is removed while heating.
12. Remove and replace the lid carefully when hot.
13. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
14. Do not switch your kettle on if it is empty.
15. To protect from electrical hazard, do not immerse this kettle, power base or cord set in any liquid.
16. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
17. To protect against fire, do not operated in the presence of explosive and/or flammable fumes.
18. While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover for avoid the steam scalding your hand.
19. Please avoid the liquid sprinkling in the LCD board and the pressed key place in the operating process. Because the water possibly can plunge in the product, causes the function to be unusual.
20. Please do not have to add surpasses the maximum water volume the water, because this has the possibility to damage the product, causes the product movement to appear exceptionally.
21. Please regular clean descale or pot bottom residuum, because this possibly can affect the normal use of the product.
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by

children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

24. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
26. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
27. **WARNING:** Avoid spillage on the connector

WARNING: If the kettle is overfilled, boiling water may be ejected. * If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRECAUTION

1. Use only cold water when filling.
2. The water level must be between the MAX. and MIN. marks
3. Switch the machine off before removing it from the base.
4. Always ensure that the lid is tightly closed.
5. The base and exterior of the machine must not become wet
6. The kettle body used must be match with the kettle base.

HOW TO OPERATE

Before using the machine for the first-time water should be boiled in it twice without any additives.

A. Before use preparatory work :


- i. Before first use, fill the kettle with clean water to maximum capacity and boil. Discard the water and repeat the process.
- ii. The kettle should always be unplugged when filling or adding water.
- iii. Fill the kettle with water to desired level. Do not overfill or there will be a risk of spillage or spitting. The water level indicator will assist you to measure the correct amount. You can fill the kettle via the spout or after opening the lid. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.
- iv. Do not fill with less than 0.5 litres of water (to "min" indication) to prevent the kettle running dry while operating.
- v. Do not fill with less than 1.7 litres of water (to "max" indication).
- vi. An automatic safety cut-out has been fitted for protection against overheating, it will operate if the kettle is switched on when containing insufficient water. Always ensure the water inside the kettle covers the minimum mark on the water level indicator gauge. If the automatic safety cut-out has operated, switch the kettle off, disconnect from the power outlet and allow the kettle to cool down for 5 to 10 minutes. The refill with and switch on, the kettle will work as normal.
- vii. After boiling, the kettle switches off automatically. Disconnect the kettle from the mains electricity supply.

Do not open the lid when pouring. If the kettle is overfilled, boiling water may be ejected. The kettle is only to be used with the stand provided.


This appliance is intended to be used in household and similar applications such as:





- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

B. Basal operation :

- Put the base on the dry, smooth and horizontal plane, insert the plug to the socket. When the kettle was inserted into the base , the power puts through automatically.
- Presses the " " key shortly, with the sound "Di.", it starts running.
- After the water boils, indicator turns off and the buzzer sends out a group "di-di-di" sounds at the same time.

C. Advanced operation:

- Press " " for 3 seconds, with the buzzer sends out "di" sound, it starts running the function of heat insulation. The LED light will be shining with red light, while after the water boils, the kettle will keep the water temperature for 2 hours with the indicator light shining. During the 2 hours heat insulation function running, it will go on heating when the temperature arrives at 85°C.

- ii. Press " " for once, we can see the indicator light of 60°C shines, with the green LED light. It means that it will stop heating when the water temperature is 60°C.
- iii. Press " " for twice, we can see the indicator light of 70°C shines, with the blue LED light. It means that it will stop heating when the water temperature is 70°C.
- iv. Press " " for 3 times we can see the indicator light of 80°C shines, with the yellow LED light. It means that it will stop heating when the water temperature is 80°C
- v. Press " " for 4 times we can see the indicator light of 90°C shines, with the purple LED light. It means that it will stop heating when the water temperature is 90°C.
- vi. After the use finished, please put plug off the power socket.

CLEANING INSTRUCTION

- Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.
- Never immerse the kettle in water or other liquids.
- From time to time, depended on the nature of your water supply, a boiled scale deposit is naturally formed and can be found mostly adhered to the heating element, thus reducing the heating efficiency.
- The amount of boiled scale deposited (and subsequently the need to clean or rescale) largely depends on the water hardness in your area the frequency with which the kettle is used.

- Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling

1. Descale kettle regularly. With normal use : at least twice a year
2. Fill the kettle up to "max" with a mixture of one-part ordinary vinegar and two parts waters. Switch on and wait for the appliance to switch off automatically.
3. Let the mixture remain inside the kettle overnight.
4. Discard the mixture the next morning.
5. Fill the kettle with clean water up to "max" mark and boil again.
6. Discard the boiled water to remove any remaining scale and vinegar.
7. Rinse the inside of the kettle with clean water.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.