

# wirata<sup>®</sup>

## INSTRUCTION MANUAL

Model No.:

**LT-D6.5**


Please read *Instruction Manual* before use  
& Follow ALL the instructions carefully.

<b>Model No.</b>	<b>LT-D6.5</b>
Power Consumption	6.5W
Power Supply	AC220V-240V DC 3V (Battery UM-1x2)
Output Impedance	4 Ohm speaker
FM Radio Frequency Range	88 - 108 MHz
MW Radio Frequency Range	530 - 1600 KHz
SW Radio Frequency Range	8-18 MHz

## WHAT'S IN THE BOX

1. Radio – 1set
2. Power cord – 1pc
3. Instructional Manual – 1pc

## PARTS DESCRIPTION

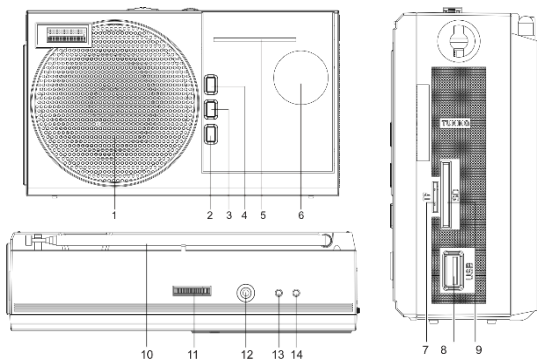

### MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- |                         |                        |
|-------------------------|------------------------|
| 1: Speaker              | 8: USB Card slot       |
| 2: Previous/Rewind      | 9: SD Card slot        |
| 3: Next/Fast forward    | 10: Telescopic antenna |
| 4: Play/Pause           | 11: Volume button      |
| 5: Display scale window | 12: Headphone jack     |
| 6: Tuning button        | 13: Tuning light       |
| 7: TF Card slot         | 14: Play indicator     |

## PRECAUTIONS

- In order to avoid fire or electric shock, do not expose the machine to rain or moisture.
- Before using AC power to power the machine, please check whether the grid voltage is the same as the voltage specified in this manual.
- Pay attention to the (+/-) polarity direction of the dry battery, and insert the battery correctly according to the instructions.
- When the product is not used for a long time, it is recommended to remove the dry battery to avoid damage to the product due to battery leakage.

## SAFETY INSTRUCTIONS

- a) **Cannot be used in the following places:**
- Next to the gas stove.
  - Places with flammable gas
  - Places splashed with rain and water may cause discoloration, deformation, fire, and electric shock.
- b) Do not place it in a car or a place exposed to direct sunlight. Abnormal high or low temperature will cause adverse effects and cause fire and electric shock.
- c) Do not use it in an unstable place. Falling may cause malfunction.
- d) Do not knock on the body to avoid malfunction.
- e) Please do not use dry batteries other than those specified, or different types, mixed use of new and old dry batteries.
- f) If the dry battery is ruptured and leaking, it cannot be used, which may cause damage or malfunction to the product.
- g) Cannot charge dry batteries.
- h) When thundering, please do not touch the whip antenna and power plug to avoid the risk of electric shock.
- i) Please insert the power plug correctly into the socket.
- j) When unplugging the power cord, please hold the plug part with your hand and pull it out. Do not pull the power cord.

- k) When not in use, be sure to unplug the power plug.
- l) When you find an abnormality (smelly, smoke, etc.), please unplug the power plug quickly and stop using it.
- m) Please clean the dust on the power plug regularly. Dust adhering to the power plug may cause short circuit, malfunction, etc.
- n) Do not touch or unplug the power plug with wet hands, as this may cause the risk of electric shock. Do not get into water, it will cause short circuit or electric shock.
- o) It is forbidden to repair by non-professional repair technicians. For maintenance matters, please contact local dealers.
- p) It is not advisable to use the loud volume state for a long time to listen, so as not to damage the hearing of the ears.
- q) When transporting, please handle with care. Please remove the USB memory and SD card during transportation to avoid damage to the USB memory and SD card.
- r) Do not put foreign objects such as pins, iron wires and other metal objects in the crevices of the fuselage.
- s) For safety during maintenance, please unplug the power plug. Please use a soft cloth soaked in clean water or soapy water and wring dry before wiping.
- t) Do not use alcohol or thinner to clean the cabinet, which may cause discoloration, deformation, electric shock and other malfunctions.
- u) Do not place the power cord where infants and children can reach it. In order to avoid accidents caused by wires entangled around the neck.

## HOW TO OPERATE

### 1. USING THE POWER CORD/ BATTERY:

- a) This machine can be used by plugging in the power cord or installing dry batteries.
- b) Remove the dry battery when using the power cord.
- c) If there is a dry battery in the main unit, connect the

power plug to the socket and it will switch to household power.

- d) When using dry batteries, please unplug the power plug from the socket.

## **2. WHEN USING HOUSEHOLD POWER**

- a) Plug the power cord into the AC socket of the main unit to charge the built-in battery.

## **3. WHEN USING DRY BATTERIES**

- a) Press the battery door buckle, push and pull back, open the battery door, insert 2 (UM-1 1.5V) batteries in the correct direction as shown in the battery room and close the battery door.
- b) When installing the battery cover, please align the holes first, and then press it down until you hear a clicking sound.

### **Warning:**

- a) Pay attention to the (+/-) polarity direction of the dry battery and insert the battery correctly according to the instructions.
- b) When not in use for a long time or when using household power, it is recommended to remove the dry battery.

## **4. SWITCH THE FUNCTION POSITION TO USB/SD TO PLAY USB/SD/TF CARD:**

- a) Insert a USB/SD/TF card to play songs directly. During playback, press the "PLAY / PAUSE" button to pause playback, and press again to continue playback.
- b) During playback, press the "PREV/REW" button to skip to the previous song; press the "NEXT/FF" button to skip to the next song, and long press these two buttons to move forward quickly and backwards.

- c) When you need to stop using the machine, turn the switch to the OFF position to disconnect the USB/SD/TF card.

**Note:** Please do not pull out the USB/SD/TF card to play, otherwise it will cause damage and cannot play normally.

**5. SWITCH THE FM POSITION OF THE RADIO STATION:**

- a) Insert Adjust the volume (VOLUME) to a moderate position, and then adjust the band button to the FM position, you can listen to any radio program at 88-108MHz.
- b) Push to the SW band, and then turn the tuning button, you can listen to any radio program from 8-18MHz.
- c) When receiving FM shortwave broadcast, please pull out the telescopic FM antenna to get better reception.

**6. THE FUNCTION IS SWITCHED TO THE POSITION OF THE RADIO STATION TO LISTEN TO THE MW BAND:**

- a) Please push the function button to the MW position, and then twist the tuning button, you can listen to any radio program at 530-1600KHz.
- b) When the receiving radio signal is not good, please adjust the orientation of the receiver to get a better receiving signal.

**7. OPERATION AND USE OF EARPHONE FUNCTION:**

- a) Please insert the earphone plug into the "PHONE" jack when you are listening to USB, cassette, or radio programs, and turn the "VOLUME" volume button to the appropriate volume.

## TROUBLESHOOTING GUIDE

- a) When you are not using this machine, please turn off the power of this machine.
- b) When playing, there will be noise/broken sound/lower sound/distorted sound due to the following reasons:
  - i. The voltage may be too low. Charge the battery or replace the battery in time.
  - ii. External signal interference, stop working.
- c) There is no sound for the following reasons:
  - i. The power is not turned on or the switch is not turned on.
  - ii. The speaker may be broken, please replace the speaker.
- d) If the machine is not used for a long time, the battery should be taken out to prevent the battery fluid from leaking out and damaging the machine.



### **ENVIRONMENT PROTECTION**

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.