

# wirata®

## INSTRUCTION MANUAL

Model No.:

**SF-160A**


Please read *Instruction Manual* before use  
& follow ALL the instructions carefully.

<b>MODEL NO.</b>	<b>SF-160A</b>
POWER	50W
VOLTAGE	220-240V
FAN SIZE	18" (400mm)
FREQUENCY	50-60Hz
FAN SPEED	3
NO. OF BLADE	5

## WHAT'S IN THE BOX

1. Wall Fan – 1set
2. Instruction Manual– 1 set

## PARTS DESCRIPTION

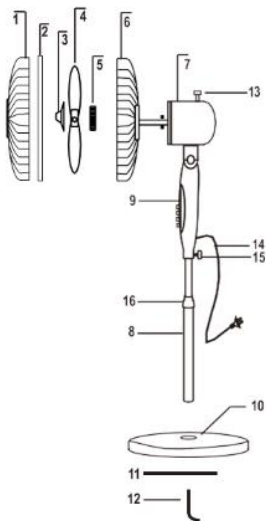

### MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- 1: Front Guard
- 2: Guard ring
- 3: Blade cap
- 4: Blade
- 5: Blade lock
- 6: Rear Guard
- 7: Motor
- 8: Leg
- 9: Control panel
- 10: Base
- 11: Washer
- 12: L type screw
- 13: Oscillation knob
- 14: Power line
- 15: Screw fixer for fan body
- 16: Adjustable pole

## GENERAL INSTRUCTION

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this **"Instructions for use"** for future reference.

## SAFETY INSTRUCTIONS

**WARNING** - To reduce the risk of fire, electric shock or injury to persons or property:

1. Before use, check if the voltage supply with the specifications marked on the voltage label attached to the appliance bottom.
2. Before use, you should check if the power cord and plug is not damaged. To avoid poor contact, please do not bend or twist the power cord with force.
3. Before unplugging the power plug, turn off the power. Do not use wet hands to pull the plug to avoid electric shock.
4. Please do not hang any clothes on the fan guards.
5. Do not use it before assembling.
6. Please do not use it at the place where there is curtain. Otherwise, the motor will stall and operate abnormally.
7. Please do not use the fan at high temperature (above 30°C) and high humidity area (shower rooms), and dusty areas. Otherwise, deformation or failure will be resulted.
8. Please do not insert the figure or any object into the guards when the fan is running. It will cause injury to person especially children.
9. Please do not spray insecticide on the fan. Otherwise, the resin and painted parts will be affected.

10. Please do not blow the baby, elder and patient directly for long time.
11. Do not use it in an uneven or unstable place where drop or damage might be caused.

**WARNING:** Do not use the device near water, over the bath tub, pool or other water basin.

\*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



## ASSEMBLY INSTRUCTION

1. **Assembly of leg:**
  - a) Insert the front part of leg into the hole to the base.
  - b) Push down the leg in place so as to make the two matches perfectly.
  - c) Screw or fasten leg and base.
2. **Rear guard assembly:**
  - a) Clockwise draw out the blade cap, and take out the guard lock anticlockwise, and then install the rear guard aligning it with the three struts on the front motor cover.
  - b) Lock and fix it clockwise with the guard lock.
3. **Fan blade assembly:**
  - a) Insert the fan blade into the motor shaft to the uttermost with the back of the leaf completely aligning with the motor pin.
  - b) Anticlockwise clock the blade cap into the motor shaft and fix it tightly.
4. **Front guard assembly:**
  - a) Hang the hanger at the front guard on the right top of the rear guard, and fasten the guard ring tightly around the rear guard.

- b) Be sure to make the front and rear guards completed aligned.
- c) Press into the fixing guard clip under the front guard ring and lock the guard clip screw.

## **HOW TO OPERATE**

- 1. Press the buttons speed to control fan:  
0-stop,1-low,2-medium,3-high.
- 2. Oscillation: To control the oscillation, switch up the oscillation knob oscillation OFF, switch down the oscillation knob oscillation ON.
- 3. Loosen the nut of adjustable pole to adjust the height, then tighten the nut when got the height needed.
- 4. Routing the timer to select the time, do not routing back the timer (only if it has a timer).

## **CLEANING INSTRUCTION**

- 1. Clean and maintain the fan according to the illustration on the right.
- 2. Be sure to clean the fan body and fan blade to avoid color change or damage.
- 3. After maintenance, please follow the original packing orders to keep the fan properly stored.
- 4. Properly store the fan at a dry place.
- 5. The fan only needs some general external maintenance.
- 6. Before cleaning, please turn off all power supply.
- 7. Firstly, clean with kitchen detergent. Then, wipe it clean with soft cloth.
- 8. Never wash with water.
- 9. To avoid discoloring or deterioration, do not wipe with thinner, toluene, acid detergent, kerosene, alcohol or chemical cloth.

## USE ENVIRONMENT

1. Surrounding air maximum temperature: +40°C
2. The surrounding air is highest the relative temperature: 90% (+25°C)
3. Elevation: <1000m



### ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.