

wirata®

INSTRUCTION MANUAL

Model No.:

SP-50S

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

 
| Model No. | SP-50S |
|---------------------|----------------------------------|
| Output Power | 20W+10Wx2(RMS) |
| S/N | ≥80dB |
| Conteller | Volume/ Treble/ Bass |
| Woofers unit | 4" speaker magnetically shielded |
| Woofers impedance | 6 Ω |
| Subwoofer Dimension | W150 * H225 * D220mm |
| Satellite Dimension | W86 * H153 * D80mm |

WHAT'S IN THE BOX


1. Subwoofer – 1set
2. Satellite – 2pc
3. Input cable – 1pc
4. User guide – 1pc
5. Remote – 1pc

PARTS DESCRIPTION

Front View of Woofer

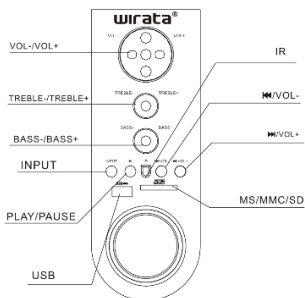


Back View of Woofer

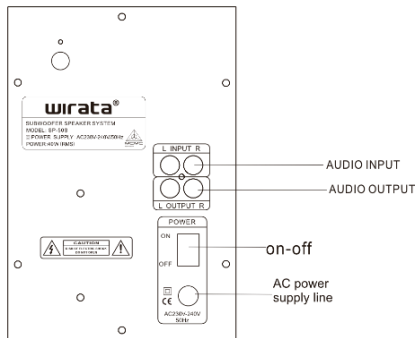 

HOW TO OPERATE

 1. Connect the satellites to the audio output jack on the rear panel (R & L). As shown in diagram below:

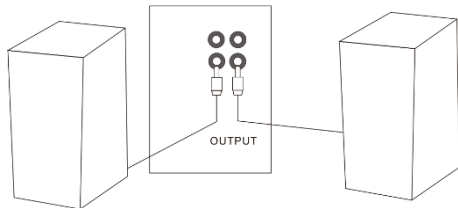

2. Connect an auxiliary source to the audio input jacks in rear panel.
3.
 - (1) LED will indicate that the power is on, when you turn the switch "on" and then accordingly adjust volume to desired level.
 - (2) To increase or decrease Bass, kindly use the Bass control to set Bass level.
 - (3) Turn up the volume control to adjust main volume.
Notice: High volume can damage your hearing.
 - (4) Try with different sound equipment, e.g., VCD, DVD, computer, CD etc.
 - (5) Press "mode" button to "Bluetooth" function, and open the Bluetooth function of your phone. The Bluetooth name is the product's model and then can connect.

WARNING

- High voltage inside, cannot privately.
- Keep dry, cannot expose to water or put flowerpot on speaker.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.