

wirata®

INSTRUCTION MANUAL

Model No.:

SP-70S

Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.


SP-70S (SPEAKERS)	SATELLITE	SUBWOOFER
Drive Size	3inch	5inch
Impedance	6Ω	4Ω
Frequency Range	150Hz-20KHz	40Hz-150Hz
Sensitivity(1w/1m)	72dB	72dB
Power Output	10Wx2	20W

SP-70S (AMPLIFIER)	SATELLITE	SUBWOOFER
Channel Separation	≥40dB	≥40dB
Signal to Noise Ratio	≥72dB	≥72dB
Power Requirements: Voltage	AC240V/50Hz	

WHAT'S IN THE BOX

1. Subwoofer – 1pc
2. Satellite – 2pc
3. Input cable – 1pc
4. User guide – 1pc
5. Remote – 1pc


PARTS DESCRIPTION

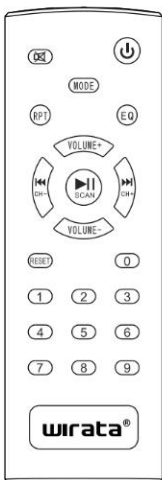



- MODE** ----- The input signal switching (BT Play/AUX/SD/USB/FM)
- Power** ----- Stand by (on/off) mode for speaker unit.
- ◀◀/CH-** ----- Previous track in USB & SD Card modes, previous FM station in FM mode.
- ▶▶/SCAN** ----- Play & pause in USB & SD Card modes, Mute/Unmute in AUX & FM modes, Long press for auto searching - FM station in FM mode.
- ▶▶/CH+** ----- Next track in USB & SD Card mode Next FM station in FM mode.
- 0-9**----- 0 TO 9 button is the selection key to select the songs in the USB and SD Card
- RESET**----- **Reseteer** Volume to 30
- EQ**----- Equalizer presets in USB & SD/MMC modes
- VOLUME+** ----- The volume control


SPEAKER OPERATION MANUAL

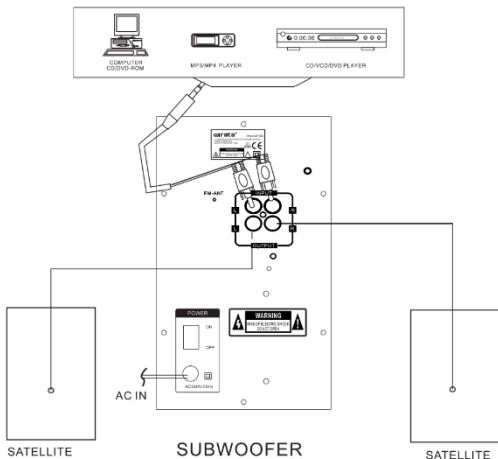Connection Illustration & Input Options



 <p>The lightning flash with arrowhead symbol, within an exclamation triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE BACK</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance</p>
<p>Remarks</p> <ol style="list-style-type: none"> 1. Do not expose the product to high temperature, water or moisture 2. Do not attempt to open or disassemble the product. You can get an electrical shock. 3. The authorized service personnel Only , or else the warranty is invalid. 4. Please turn off the power and pull out the plug when the product is not in use. 5. USB connection can be used only for playing songs storage from U-disk. Charging for mobile or digital products is prohibited 		

FRONT PANEL & CONTROLS

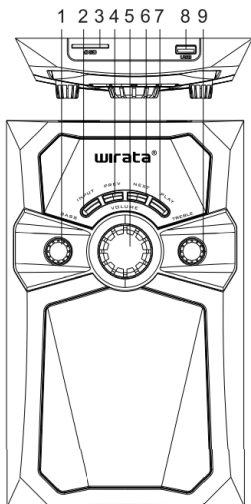

1. BASS: Bass+/- control
2. INPUT: Select the Input source (Aux, Bluetooth, USB, SD, or FM)
3. SD: SD/MMC Card Slot
4. PREV:
In USB/SD mode: Press to go to previous track.
In FM mode: Press to go to previous pre-saved FM channel.
In all modes: Press and hold to decrease the volume.
5. VOLUME: Volume+/- control
6. NEXT:
In USB/SD mode: Press to go to next track.
In FM mode: Press to go to next pre-saved FM channel.
In all modes: Press and hold to increase the volume.
7. PLAY:
In USB/SD mode: Press to Play the track. Press again to Pause the playing track. Press to Play again.
In FM mode: Long Press to search and save the FM Channels. Short Press will Mute the audio in Aux & FM Modes. Press again to release it from Mute.
8. USB: USB Port for the pen drive
9. TREBLE: Treble+/- control



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.