

# wirata®

## INSTRUCTION MANUAL

Model No.:

**SP-80C**

Please read *Instruction Manual* before use  
& Follow ALL the instructions carefully.

 
<b>SP-80C (SPEAKERS)</b>	<b>SATELLITE</b>	<b>SUBWOOFER</b>
Drive Size	3inch	6.5inch
Impedance	6Ω	8Ω
Frequency Range	150Hz-20KHz	40Hz-150Hz
Sensitivity(1w/1m)	88dB	80dB
Power Output	15Wx2	40W

<b>SP-80C (AMPLIFIER)</b>	<b>SATELLITE</b>	<b>SUBWOOFER</b>
Channel Separation	≥40dB	≥40dB
Signal to Noise Ratio	≥72dB	≥72dB
Power Requirements: Voltage	AC220- 240V/50Hz	

## WHAT'S IN THE BOX

1. Subwoofer – 1pc
2. Satellite – 2pc
3. Input cable – 1pc
4. Instruction Manual – 1pc
5. Remote – 1pc

## PARTS DESCRIPTION

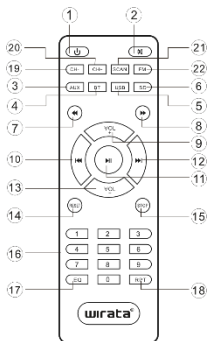 


### MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- |                 |                    |
|-----------------|--------------------|
| 1: Power ON/OFF | 12: Forward        |
| 2: Mute         | 13: Volume -       |
| 3: AUX          | 14: Reset          |
| 4: Bluetooth    | 15: Stop           |
| 5: USB          | 16: Number         |
| 6: SD card      | 17: Equalizer      |
| 7: Back         | 18: Repeater       |
| 8: Next         | 19: Channel Down - |
| 9: Volume +     | 20: Channel Up +   |
| 10: Rewind      | 21: Search/ Scan   |
| 11: Play/Pause  | 22: FM Antenna     |

## FRONT PANELS & CONTROLS

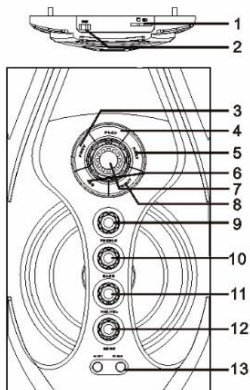

### MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

1: **SD CARD:** SD/MMC Card slot

2: **USB Port:** USB Port for the pen drive.

3: **PREV:**

In USB/SD mode: Press to go to previous track.

In FM mode: Press to go to previous pre-saved FM channel

In all modes: Press and hold to decrease the volume

4: **PLAY:**

In USB/SD mode: Press to Play the track. Press again to

Pause the playing track. Press to play again.

In FM mode: Long Press to search and save the FM channels.

Short Press will Mute the audio in AUX & FM Modes. Press again to release it from Mute.

5: **NEXT:**

In USB/SD mode: Press to go to the next track.

In FM mode: Press to go to next pre-saved FM channel.

In all modes: Press and hold to increase the volume.

 
- 6: **EQ:** To audio conversion
- 7: **VOLUME:** Master volume +/- control
- 8: **INPUT:** Select the input source (Bluetooth, AUX, SD, USB/ FM)
- 9: **TREBLE:** Treble +/- control
- 10: **BASS:** Bass +/- control
- 11: **MIC VOL:** Mic vol +/- control
- 12: **ECHO:** Echo +/- control
- 13: **MIC 1 (MIC2):** MIC Jack



## BLUETOOTH CONNECTION INSTRUCTION

- a) First, press the **INPUT KEY** to switch to the "BT" **Bluetooth Audio Input** mode.
- b) Next, open the phones Bluetooth and search around 1-3 times for the Bluetooth device. Click on the Bluetooth name for the "**Bluetooth Speaker**" on the Bluetooth device.
- c) Operating the remote control or mobile phone can play normal keys to own music in the music player.

# SPEAKER OPERATION MANUAL
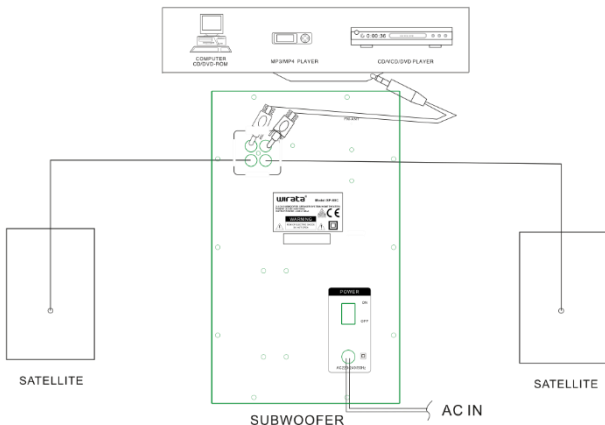
## Connection Illustration & Input Options



 <p>The lightning flash with arrowhead symbol, within an exclamation triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons</p>	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE BACK</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance</p>
<p><b>Remarks</b></p> <ol style="list-style-type: none"><li>1. Do not expose the product to high temperature, water or moisture</li><li>2. Do not attempt to open or disassemble the product. You can get an electrical shock.</li><li>3. The authorized service personnel Only, or else the warranty is invalid.</li><li>4. Please turn off the power and pull out the plug when the product is not in use.</li><li>5. USB connection can be used only for playing songs storage from U-disk. Charging for mobile or digital products is prohibited</li></ol>		

**ENVIRONMENT PROTECTION**

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.