

wirata®

INSTRUCTION MANUAL

Model No.:

WF-160


Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	WF-160
POWER	50W
VOLTAGE	220-240V
FAN SIZE	16" (400mm)
FREQUENCY	50Hz
NO. OF BLADE	5
FAN SPEED	3

WHAT'S IN THE BOX

1. Wall Fan – 1set
2. Instruction Manual– 1 set

PARTS DESCRIPTION

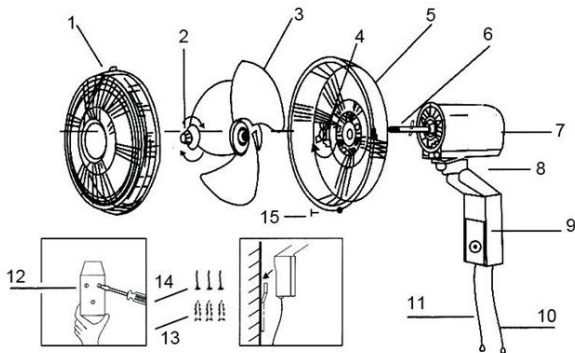

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|---------------------|------------------------------|
| 1: Front grill | 9: Switch housing |
| 2: Fan Blade nut | 10: 3 Speed pull control |
| 3: Fan Blade | 11: Oscillation pull control |
| 4: Rear Grill Screw | 12: Wall mounting bracket |
| 5: Rear Grill | 13: Wall Plugs |
| 6: Motor Shaft | 14: Fixing screw |
| 7: Motor Housing | 15: Grill screw |
| 8: Tilt neck | |

GENERAL INSTRUCTION

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this **"Instructions for use"** for future reference.

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of fire, electric shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
3. The appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible by their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Do not leave the fan running unattended.
6. Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
7. If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.

8. Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
9. This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
10. Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
11. Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
12. Avoid contact with moving parts. Do not insert any body parts (e.g., finger) or objects through the grill when the fan is operating.
13. Do not cover the grille, or operate in close proximity to curtains, etc.
14. This product is intended for normal domestic/household use only.
15. Always disconnect the fan when moving it from one location to another.
16. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
17. Be sure fan is on a stable surface when operating to avoid overturning.
18. Do not immerse in water.
19. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person, in order to avoid a hazard.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.

*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



ASSEMBLY INSTRUCTION

1. Remove the rear grill lock nut (4) from the motor shaft spindle (6).
2. Fill the rear grill (5) by positioning it on the location pins. Secure the grill to the motor body with the grill lock nut (4).
3. Push the fan blade (3) onto the motor shaft (6) until the fan blade is appropriately fitted. For models with shaft pins, push the fan blade onto the motor shaft by matching the slots on the base of the blade with the shaft pin.
4. Secure the blade with the blade nut (2) by turning it COUNTER - CLOCKWISE. Check that the fan blade rotates freely by turning it with your hand.
5. Open securing clips around the front grill (1) and loosen the clip screw at the bottom of the front grill. Position the top clip on the uppermost part of the rear grill. Push the top clip down and press rim of the front grill onto the rear grill. Close all clips around and tighten the safety screw.
6. Select an appropriate location and fix the mounting bracket (12) onto a strong wall (or locate a stud behind plaster boards) with three wall plugs (13) and screws (14) supplied.
Note: Consider a location within a distance of 0.8m radius from a wall power outlet to make sure you can plug the unit into the power point easily.
7. Mount the wall fan on the mounting hook and plug in the unit.
8. If the power cord is hanging loosely between the fan and the power outlet, make sure it will not touch or obstruct fan blade rotation or fan oscillation in any way.

HOW TO OPERATE

1. Plug the fan into an electrical socket and switch on at the wall.
2. You can control your wall fan either with the twist knob, or with pull cords.
3. Pull on the cord to switch the fan on. At first start-up the fan will operate at low speed.
4. Pull on the same cord a couple of times to reach desired fan speed. Choose between Low (1), Medium (2) and High (3) fan speed.
5. Pull on the other cord to switch on the oscillation mode.
Caution: The fan should always be switched off when making this adjustment.

CLEANING INSTRUCTION

1. Switch off and unplug from the power supply before assembling or disassembling and cleaning.
2. Keep the air vents at the rear of the main body free from dust or fluff- use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.
3. Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing
4. Thoroughly remove soap film with clean water.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.