

wirata®

INSTRUCTION MANUAL

Model No.:

FF-200


Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

MODEL NO.	FF-200
POWER	120W
VOLTAGE	220-240V
FAN SIZE	20"
FREQUENCY	50Hz
NO. OF BLADE	3
FAN SPEED	3

WHAT'S IN THE BOX

1. Floor Fan – 1set
2. Instruction Manual– 1 set

PARTS DESCRIPTION

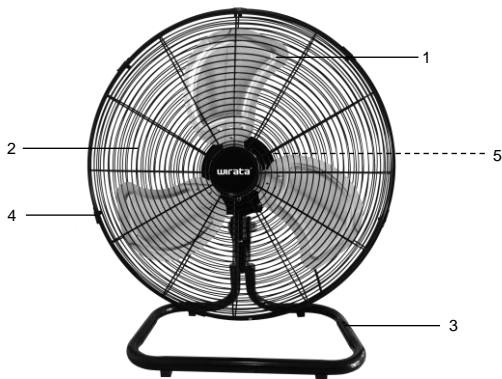

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- 1: Fan blades
- 2: Front grill
- 3: Fan base
- 4: Clip
- 5: Speed control

GENERAL INSTRUCTION

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this **"Instructions for use"** for future reference.

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of fire, electric shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
3. Do not leave the fan running unattended.
4. Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
5. If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.
6. Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
7. This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
8. Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat

- Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
9. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875watts.
 10. Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
 11. Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
 12. Avoid contact with moving parts. Do not insert any body parts (e.g., finger) or objects through the grill when the fan is operating.
 13. Do not cover the grille, or operate in close proximity to curtains, etc.
 14. This product is intended for normal domestic/household use only.
 15. Always disconnect the fan when moving it from one location to another.
 16. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
 17. Be sure fan is on a stable surface when operating to avoid overturning & do not immerse in water.
 18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person, in order to avoid a hazard.
 19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe

way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

20. Do not disassemble the appliance.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.

*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



HOW TO OPERATE

1. **Fan Operation:** Always operate the fan in the upright position following all instructions and recommendations listed in this manual.
2. **Fan Location:** Place the fan in the area of the room that will provide proper fan cooling.
3. **Fan Connection:** Plug fan directly into 240-volt A.C., 50Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.
4. **Note:** To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.
5. **Turning Fan on:** To start the fan, rotate control dial from "off" to desired fan speed "1, 2, 3".
6. **Turning Fan Off:** To turn the fan off, turn the switch from the current fan speed setting to the off position. Remove plug from outlet.
7. **Turning Oscillation On/Off:** Press the "I" on switch to start the oscillation function, press the "O" to stop oscillation.
8. **IMPORTANT NOTE:** Do not try to change the fan head direction forcibly by hand; otherwise, the fan will be

damaged. It is normal for the motor to feel warm to the touch after continuous operation. This fan features a thermostat that will automatically shut off if it overheats happens, unplug the fan from the outlet immediately.

FAN CRADLE ASSEMBLY

Simple assembly is required to use this fan.

1. Remove four mounting screws from motor housing were indicated to use for rear guard then assemble rear guard onto motor housing using screws, tighten the 4 screws securely. Fig. 1 and 2.
2. Place fan blade onto motor shaft. Tighten blade by set screw securely on flat surface on motor shaft. Fig. 3.
3. Attach front guard to rear guard with hook clip centred on the top above wire handle. Press remaining guard clips onto rear guard to securely attach front guard. Do not operate fan without guard in place. Fig. 4 and 5.
4. Loosen the screw knob on the support bracket of the motor, then insert the pole of the base, align the screw holes and secure them by fasten the screw knob. Fig.6.

Figure 1



Figure 2



Figure 3

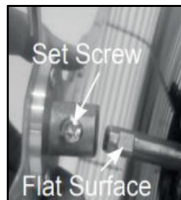


Figure 4



Figure 5



Figure 6



CLEANING INSTRUCTION

1. **Cleaning:** CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Replace front grille before fan use. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.
2. **Maintenance:** The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.
3. **Repair:** DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.