

wirata®

INSTRUCTION MANUAL

Model No.:

RC-D7.5

Please read *Instruction Manual* before use
& follow ALL the instructions carefully.

MODEL NO.	RC-D7.5
VOLTAGE	240V
CURRENT	0.5Amp
OUTPUT IMPEDANCE	4Ω
FM RADIO FREQUENCY RANGE	88–108 MHz
AM RADIO FREQUENCY RANGE	530–1600 KHz
SW RADIO FREQUENCY RANGE	9.5-18 MHz

WHAT'S IN THE BOX

- 1.Portable Radio – 1set
- 2.Power cord – 1pc

PARTS DESCRIPTION



MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|---|---------------|
| 1: Previous Track (in player mode)
Navigation on the track (long pressing) | |
| 2: Next track | |
| 3: MODE:BT/USB/micro SD (short pressing);
The previous folder when pressed and held.
in USB/micro SD mode | |
| 4: Play/Pause (in player mode) | |
| 5: Station tuning knob | |
| 6: Mode selector knob: BT/MP3/FM/AM/SW | |
| 7: On/off knob and volume control | |
| 8: USB Slot | |
| 9: Micro SD slot | 12: DC 5V |
| 10: AUX | 13: AC socket |
| 11: Player indicator | 14: Antenna |

PRECAUTIONS

- High and low temperature anomalies.
- Direct sunlight.
- Damp, water droplets, oil, chemical solvents, pesticides economy.
- Suddenly moved from a cold place to a warm place, you should not use the unit until it returns to the interior temperature.
- Do not put objects with liquids, such as vases, items on the machine.

HOW TO OPERATE

1. ON/OFF KNOB:

- a) Turn the knob to turn on the radio
- b) Control the sound level through the knob.

2. AM/FM/SW BUTTON:

- a) Tune in the desired station by tuning the knob (or press PLAY/PAUSE(▶||) button to scan program then press PREV and NEXT button to choose desired program.)
- b) Antenna: For FM, SW reception a ferrite antenna has been built-in. This antenna is also direction orientated and it is recommended to rotate the set for reception.

3. MEDIA PLAYER:

- a) Press the MP3/Music button.
- b) Insert USB/TF to play automatically.
- c) Press NEXT/F.F(▶▶) and PREV/REW(◀◀) button to choose desired song.
- d) Long press NEXT/F.F(▶▶) and PREV/REW(◀◀)button to FF and REW the song.

- e) Volume is adjusted with VOL+(▶▶) and VOL-(◀◀) button (or VOLUME knob) to desired sound level.

Please Note: Please do not pull-out USB or CARD during playing, otherwise it will cause damage. Stop and then pull out.

4. BLUETOOTH FUNCTION:

- a) Conversion from MP3/MUSIC mode to Bluetooth mode by press mode button to the BT mode with the button and automatically the prompt voice will say "**Bluetooth waiting for pairing**".
- b) Turn on the Bluetooth of your digital device (mobile phone/Tablet/ Computer etc.) search and connect it with your device named, the prompt voice will say "**Bluetooth Connecting**" if your pairing has been done correctly.

POWER OPERATION

1. BATTERY OPERATION:

- a) Open the battery compartment, according to the demand for unit and insert "UM-1" batteries (not included). It is important that the indicated battery polarity is observed.

2. AC OPERATION

- a) Plug the AC POWER cord into a wall outlet. (Please check carefully that the voltage indicated on your set corresponds to the voltage of your household current).

3. RECHARGEABLE BATTERY (FOR OPTION)

- a) Insert the AC plug to the AC socket. it begins to charge, suggest the charging time is more than 8 hours, the unit can be used.
- b) When the unit stops working, sound disappears, it means the electricity give out.

4. ATTENTION

- a) When the set is used only with AC, or not used for 4 weeks or longer. Remove of batteries is recommended as old batteries may leak and cause damage to the set. When the unit is not in use, pull the plug out of the wall.

SPECIAL ATTENTION

- a) Warning sign alerting the user of important instruction accompanying the product.
- b) Warning sign alerting the user of dangerous voltage inside the unit.
- c) This unit must not be exposed to moisture or rain.
- d) Ensure all connections are properly made before operating the unit.
- e) This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet, on bed sheets, or in a built-in installation such as a bookcase.
- f) Do not expose this unit to direct sunlight or heat radiation sources.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.

Never throw it away to the rubbish, so you will help to the improvement of the environment.