

wirata®

INSTRUCTION MANUAL

Model No.:

F-707


Please read *Instruction Manual* before use
& Follow ALL the instructions carefully.

MODEL NO.	F-707
POWER	35W
VOLTAGE	220-240V
FAN SIZE	8" (200mm)
FREQUENCY	50Hz
NO. OF BLADE	3
FAN SPEED	3

WHAT'S IN THE BOX

1. Air Circulator – 1set
2. Instruction Manual- 1 set

PARTS DESCRIPTION

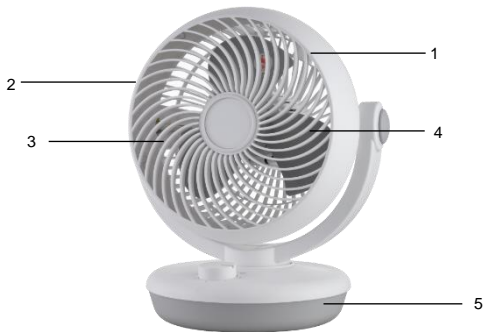

MAIN COMPONENT :

(Product may vary slightly from what is illustrated)

- | | |
|--------------------------|---------------|
| 1: Carrying Handle | 4: Fan blades |
| 2: Frontal decorate ring | 5: Fan base |
| 3: Front grill | |

GENERAL INSTRUCTION

When using the electrical appliance, the following basic safety precautions should always be followed.

Please read these instructions carefully. Pay your special attention to important safety instructions. Keep this "**Instructions for use**" for future reference.

SAFETY INSTRUCTIONS

WARNING - To reduce the risk of fire, electric shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
3. Do not leave the fan running unattended.
4. Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
5. If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.
6. Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
7. This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
8. Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat

- Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
9. Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
 10. Avoid contact with moving parts. Do not insert any body parts (e.g., finger) or objects through the grill when the fan is operating.
 11. Do not cover the grille, or operate in close proximity to curtains, etc.
 12. This product is intended for normal domestic/household use only.
 13. Always disconnect the fan when moving it from one location to another.
 14. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
 15. Be sure fan is on a stable surface when operating to avoid overturning & do not immerse in water.
 16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person, in order to avoid a hazard.
 17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 18. Do not disassemble the appliance.

WARNING: Do not use the device near water, over the bath tub, pool or other water basin.

*Observe the above-mentioned rules in order to avoid burning, electric shock or fire hazard. Make sure you understand the instructions.



HOW TO OPERATE

1. After opening the package check whether the parts are in good condition and whether the power cord is damaged. After unpacking, please keep the packing materials properly for use when storing this product.
2. Check whether the parts in the packing box are consistent with the packing list in the manual.
3. Check whether the dower supply is consistent with the parameters on the nameplate of the machine.

Product Assembly

1. Connect the iron pipe and the chassis, and insert the iron pipe slotted and aligned with the arrow of the chassis and the iron pipe is not loose.
2. Take out the provided accessories (washer 1pc, fixing screw 1pc, wrench 1pc) and tighten the fixing screw from the back of the chassis with a wrench until it cannot be turned screw from the back of the chassis with a hex wrench until it cannot be turned.
3. Connect the host to the installed iron pipe and screw in the fixing nut with a bolt until it cannot be turned.
4. Unscrew the screw that fixes the air outlet net on the ring of the net cover assembly to keep it for use, and remove the air outlet net and blades clockwise.
5. Then assemble the rear net cover and the front baffle of the main engine, tighten them with a lock nut and then assemble the fan blades. Will finally come out.
6. The wind net is assembled on the net ring in a counterclockwise direction and screwed on to fix it.

CLEANING INSTRUCTION

1. Please clean this product when it is not used for a long time. After it is dry, put the body and parts in the original packaging box and store it in a cool and dry place for keeping.
2. Before cleaning, please cut off the power supply, and only clean the unit after it completely stops working.
3. Do not rinse the product directly with water. It is forbidden to immerse the product in water for cleaning. It can be wiped with a soft cloth containing a little neutral detergent, and then wiped with a clean soft cloth. Do not use gasoline, toluene, and other solvents for cleaning.
4. After cleaning, please let the unit is fully dried before use it again.

TROUBLE SHOOTING

Fault Situation	Reason	Solution
Fan is not working	1.The power cord is not plugged in or has poor contact 2. Not press On/Off button	1. Insert power plug completely 2. Press On/Off key on control panel or remote control

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations. Never throw it away to the rubbish, so you will help to the improvement of the environment.